

# ENGINEERING PRACTICE

VOLUME 2 NUMBER 2

APRIL 2016

**SPECIAL FEATURE**

**Benchmarking Waste Water  
Treatment Systems**



# ENGINEERING PRACTICE

VOLUME 2  
NUMBER 2  
APRIL 2016

## ACADEMIC BOARD

**Dr. Dominic Foo**

**Dr. Sivakumar**

**Kumaresan**

**Dr. Ir. Muaffaq A Yani**

**M.Eng**

**Ir. Drs. Muradi**

**Suwargina M.T**

**Ery Fatarina S.T, M.T**

## INDUSTRY BOARD

**Helmilus Moesa**

**Supriyanto**

**Timothy M. Zygula**

**Lee Pheng**

## LEADERSHIP BOARD

**Karl Kolmetz**

**William B. Lotz**

**Lin L. Choo**



**IACPE**  
INTERNATIONAL ASSOCIATION OF  
CERTIFIED PRACTICING ENGINEERS

## ABOUT

International Association of Certified Practicing Engineers provides a standard of professional competence and ethics. Identifies and recognizes those individuals that have meet the standard. And requires our members to participate in continuing education programs for personal and professional development.

In addition to insuring a professional level of competency and ethics the IACPE focuses on three major areas of development for our members: Personal, Professional, and Networking.

## HISTORY

The International Association of Certified Practicing Engineers concept was formulated by the many young professionals and students we meet during our careers working in the field, running training courses, and lecturing at universities.

During question and answer sessions we found the single most common question was: What else can I do to further my career?

We found, depending on the persons available time and finances, and very often dependent on the country in which the person was from, the options to further ones career were not equal.

Many times we found the options available to our students in developing countries were too costly and or provided too little of value in an expanding global business environment.

The reality is that most of our founders come from countries that require rigorous academic standards at four year universities in order to achieve an engineering degree. Then, after obtaining this degree, they complete even stricter government and state examinations to obtain their professional licenses in order to join professional organizations. They have been afforded the opportunity to continue their personal and professional development with many affordable schools, programs, and professional organizations. The IACPE did not see those same opportunities for everyone in every country.

So we set out to design and build an association dedicated to supporting those engineers in developing in emerging economies.

The IACPE took input from industry leaders, academic professors, and students from Indonesia, Malaysia, and the Philippines. The goal was to build an organization that would validate a candidates engineering fundamentals, prove their individuals skills, and enhance their networking ability. We wanted to do this in a way that was cost effective, time conscience, and utilized the latest technologies.

## MISSION

Based on engineering first principles and practical real world applications our curriculum has been vetted by academic and industry professionals. Through rigorous study and examination, candidates are able to prove their knowledge and experience. This body of certified professionals engineers will become a network of industry professionals leading continuous improvement and education with improved ethics.

## VISION

To become a globally recognized association for certification of professional engineers.

**WWW.IACPE.COM | INFO@IACPE.COM**

**KNOWLEDGE. CERTIFICATION. NETWORKING**

## LETTER FROM THE PRESIDENT

KARL KOLMETZ

### What Makes a Good Employee?



If you search Google for “What Makes a Good Employee,” you will find multiple list of attributes. Many of the list have 10 to 15 attributes listed. Most of the attributes are easy to list; intelligent, ambitious, hardworking, self-motivated, disciplined, continuous learning, punctual and others.

If you look up the word “Good Employee” in the dictionary you might find this picture.



Of course some of my bosses may agree, but others may not.

Every year companies spend millions of dollars trying to find good employees. Normally, within the first six months you began to know if your selected person is a good employee. Most of the list have these two attributes: 1. Self-Motivated and 2. Continuously Learning. An easy way to find people that are self-motivated and continuously learning is to survey the members of IACPE.

IACPE members are self-motivated. They have gone above and beyond to learn additional practical knowledge and become certified. They are also Continuously Learning. They are participating in a continuing education program to keep their knowledge and certification current.

The Best of Luck in Your Quest for Good Employees,

Karl Kolmetz

# BECOME A CERTIFIED ENGINEER



IACPE supports engineers developing across emerging economies focusing on graduates connecting with industrial experts who can help further careers, attaining abilities recognized across the industry, and aligning knowledge to industry competency standards.

IACPE offers certification in the following engineering fields:  
Mechanical, Metallurgy, Chemical, Electrical, Civil, Industrial, Environmental, Mining, Architectural, Bio, Information, Machine and Transportation.

**WWW.IACPE.COM**

# INDUSTRY NEWS



## Johor, Amity Energy to build refrigerated LPG terminal in Malaysia

Amity Energy signed a memorandum of understanding with Johor Corp. to build and operate a refrigerated liquefied petroleum gas (RLPG) terminal in the Tanjung Langsat industrial complex, officials announced on Tuesday. This RLPG terminal will be the first of its kind in Malaysia.

The project involves the construction of a 1.0 MMtpy throughput RLPG storage and break bulk facility at an estimated project cost of \$150 million to \$200 million. Upon completion, the RLPG terminal will be equipped to handle the storage and distribution of propane and butane, with direct connectivity to the deep-water berth facility capable of receiving very-large gas carriers.

The RLPG terminal is expected to be operational in the first quarter of 2018. Amity Energy says it is in the final stages of discussion with potential customers and expects to have final investment approval by end of July 2016.



**TOTAL**

## European refining margins weakened in Q1

French oil and gas company Total said that its refining margins in Europe had fallen to \$35.1/ton in the first quarter of the year. Europe's biggest refiner still reported a European refining margins indicator (ERMI) of \$38.1/ton in the fourth quarter of 2015



## Chevron signs up Australia's Alinta to buy gas from Wheatstone LNG

Chevron has agreed to sell 20 petajoules/year of gas from its Wheatstone project to Alinta Energy in Western Australia starting in 2020, securing a customer for more than a quarter of the domestic gas output from Wheatstone.

The contract, lined up at a tough time for producers looking to seal long-term deals amid a gas supply glut, is for seven years, Chevron said on Tuesday. "This agreement is an important step in Chevron's rapidly expanding domestic gas business in Western Australia," Chevron Australia's managing director Roy Krzywosinski said in a statement.

## Asian refiners turn to Middle East's heavy crudes over Latin America

Latin American crude sold to Asia fell 1% in the first three months of 2016 from a year ago, while Middle East exports to Asia rose 7% in the first quarter, according to new data.

Asian oil buyers are seeking more heavy crude from the Middle East this year as Latin American supplies have become more expensive relative to other grades, while port and production outages have disrupted exports from Venezuela, Peru and Brazil.

Strong demand for replacements for South American crudes has driven up spot premiums for grades such as Iraq's Basra Heavy for loading in April and May, and buyers are also looking more to Saudi Arabia, Kuwait and Iran for oil of similar quality.



## Phillips 66 unveils 2016 capital expenditures plan for refining, NGL projects

Phillips 66 plans \$1.2 billion of capital expenditures in refining, with approximately 70% to be invested in reliability, safety and environmental projects, including compliance with the new Tier 3 gasoline specifications.

"The 2016 capital budget will fund Midstream growth and enhance returns in Refining," said chairman and CEO Greg Garland. "Cash from operating activities, our MLP and a strong balance sheet allow us to fund business growth while returning capital to shareholders."

# NEWS

## SEMARANG & SURABAYA CHAPTER SEMINAR

In March and April 2016, IACPE held seminar's focusing on "Petrochemical Process Plant Optimization" conduct by Mr. Helmilus Moesa (IACPE Industrial Advisor, Technical Advisor of PT.Chandra Asri Petrochemical Tbk) for Semarang Chapter at Universitas 17 Agustus 1945 Semarang and "Petrochemical Industry, an Introduction and Sharing Working Experience" conduct by Mr. Supriyanto (IACPE Industrial Advisor, General Manager of PT.Chandra Asri Petrochemical Tbk) for Surabaya Chapter at Universitas 17 Agustus 1945 Surabaya.



## MOU AND MOA WITH W.R SUPRATMAN UNIVERSITY, SURABAYA



IACPE is proud to announce the MOU and MOA signing with W.R Supratman University Surabaya in April 2016.

# Benchmarking Waste Water Treatment Systems

By:

Karl Kolmetz - KLM technology Group

Cheah Phaik Sim - Titan Petrochemicals



## ABSTRACT

Engineers today have a dual responsibility. There is the responsibility to produce the chemicals needed for food, medicine, and improvements in life style. Coupled with this need for chemical production is the need to produce these requirements with fewer impacts to the environment.

There are two routes to reduce the impacts to the environment. The first route is to develop processes that produce fewer unwanted by-products, the minimization of waste generation. The second route is the transformation of the unwanted by-products to streams of low environmental impact.

Each chemical plant constructed should include each of the routes. The transformation of the unwanted by-products to streams of low environmental impact is called the Waste Water Treatment System. It can process streams of various compositions and transform them to the desired streams of low environmental impact.

## Introduction

Many industries use large volumes of water in their manufacturing operations. Industrial Waste Water Treatment Systems treat wastewater from an industrial or manufacturing process such as a cooling tower, food or animal processing plant or any type of manufacturing process that generates wastewater. The Pulp and Paper, Steel, Refining, and Chemical industries account for more than 90% of the water used by industries in North America.

The Waste Water Treatment System has a variety of unit operations. They include gravity separators, mechanical separators, filters, stripper towers, aeration and clarifiers basins, as well as others. The transformation of the by-product streams is based on the effectiveness of each of these unit operations.

Each of these unit operations has three values.

1. Industry Standard Design Value
2. Actual Design Value and
3. Present Operating Value

The difference between the values can be benchmarked to establish areas of good operation and areas of opportunities for improvements.

An overview of each of the unit operations of a Waste Water Treatment System will be constructed and industry guidelines will be given for individual unit benchmarking.

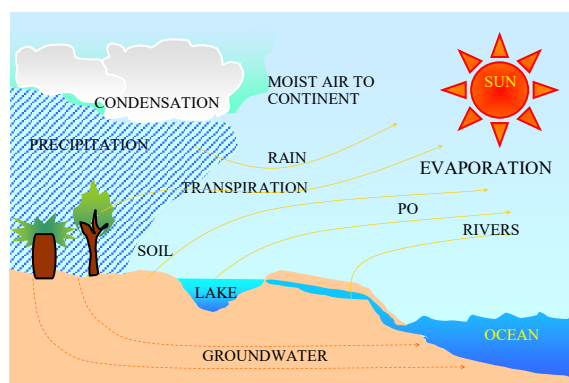


Figure 1- The Water Cycle



**ENGINEERING DESIGN  
SOFTWARE**

**SPECIALIZED TECHNICAL  
ARTICLES AND BOOKS**

**DETAILED ENGINEERING DESIGN  
GUIDELINES**

**PROJECT ENGINEERING  
STANDARDS AND  
SPECIFICATIONS**

**TYPICAL PROCESS UNIT  
OPERATING MANUALS**

**TRAINING VIDEOS**

**KLM Technology Group** is a technical consultancy group, providing specialized services and training to improve process plant operational efficiency, profitability and safety. We provide engineering solutions by offering training, technical services, best

practices, and engineering designs to meet the specific needs of our partner clients. Since 1997, KLM Technology Group has been providing engineering, operations, and maintenance support for the hydrocarbon processing industry.

**[WWW.KLMTECHGROUP.COM](http://WWW.KLMTECHGROUP.COM)**

**Engineering Solutions, Standards, and  
Software**

**KLM**

**Technology  
Group**

The treatment process and equipment is specifically directed to control or remove certain organic or chemical compounds. The flow may or may not contain domestic wastewater and ranges from several hundred to several million GPD. Industrial applications can present challenges that are specific to the plant or process. Maintenance on these systems is always mandatory and contains specific performance parameters.

Atmospheric oxygen can replenish the dissolved oxygen consumption to exceed this re-supply; the dissolved oxygen level drops, leading to the death of fish and other aquatic life.

Under extreme conditions, when the dissolved oxygen concentration reaches zero, the water may turn black and produce odors. Organic compounds are normally measured as chemical oxygen demand (COD) and biochemical oxygen demand (BOD).

The amount of organic material that can be discharged safely is defined by the effect of the material on the dissolved oxygen level in the water. Organisms in the water use the organic matter as a food source. In a biochemical reaction, dissolved oxygen is consumed, as the end product of water and carbon dioxide are formed.

Atmospheric oxygen can replenish the dissolved oxygen consumption to exceed this re-supply; the dissolved oxygen level drops, leading to the death of fish and other aquatic life.

Under extreme conditions, when the dissolved oxygen concentration reaches zero, the water may turn black and produce odors. Organic compounds are normally measured as chemical oxygen demand (COD) and biochemical oxygen demand (BOD).

Industrial Waste Water Considerations include;

1. Volume of daily flow
2. All biological and chemical characteristics of the wastewater,
3. Including biodegradability, toxic material content and any material covered by specific environmental regulations
4. Regulations of the local health department and federal or state Environmental Protection Agency

**The Waste Water Treatment System can be broken down into distinct components. <sup>(2)</sup>**

1. Pretreatment Units
2. Primary Treatment
3. Secondary Treatment
4. Tertiary Treatment
5. Sludge Handling (thickening and denaturing)
6. Sludge Disposal

## **Waste Water Treatment System Overview**

### **Pretreatment Units**

#### ***Sedimentation - Gravity Separation***

Sedimentation is the separation from water of suspended particles that are heavier than water by gravitational settling. The purpose of sedimentation is 1) clarification - to produce clean water, which can be used, recycled or further treated and 2) consolidation - to produce concentrated solids that can be more easily handled and treated.

Most waste treatment systems employ a gravity separation step for suspended particle or oil removal. The settling rate of a particle is defined in terms of "free" versus "hindered" settling. A free settling particle's motion is not affected by that of other particles, the vessel's wall, or turbulent currents. A particle has a hindered settling rate if there is any interference from these effects. <sup>(2)</sup>

Gravity settling is employed primarily for removal of inorganic suspended solids, such as grit and sand. The equipment employed for gravity separation for waste treatment is normally either a rectangular basin with moving bottom scrapers for solids removal or a circular tank with a rotating bottom scraper.

Rectangular tanks are normally sized to decrease horizontal fluid velocity to approximately 1 foot per minute. Their lengths are three to five times their width and their depths are three to eight feet.

Circular clarifiers are ordinarily sized according to the surface area, because velocity must be reduced below the design particle's terminal velocity. The typical design provides a rise rate of 600-800 gpd/ft<sup>2</sup>.

## API Separator

When wastewater contains appreciable amount of hydrocarbons, removal of these contaminants become a problem. Oil is commonly lower in density than water; therefore, if it is not emulsified, it can be floated in a separate removal stage or in a dual-purpose vessel that allows sedimentation of solids. For example, the refining industry uses a rectangular clarifier with a surface skimmer for oil and a bottom rake for solids as standard equipment. Stokes' Law expresses the basic principle governing the separation of oil from water by gravity differential as follows: <sup>(4)</sup>

$$v_p = \frac{g(\rho_p - \rho_w)d_p^2}{18\mu}$$

**Where:**

$v_p$  = particle settling velocity

$g$  = acceleration due to gravity, 9.81 m/

$\rho_p$  = density of particle

$\rho_w$  = density of water

$d_p$  = diameter of particle

$\mu$  = dynamic viscosity

## Primary Treatment – Flotation

### Air Flotation

Where the density differential is not sufficient to separate oil and oil-wetted solids, air flotation may be used to enhance oil removal. In this method, air bubbles are attached to the contaminant particles and thus the apparent density difference between the particles is increased.

Dissolved air flotation (DAF) is a method of introducing air to a side stream or recycle stream at elevated pressures in order to create a super saturated stream. When this stream is introduced into the waste stream, the pressure is reduced to atmospheric, and the air is released as small bubbles. These bubbles attach to contaminants in the waste, decreasing their effective density and aiding in

their separation.

The most important operation parameters for contaminant removal by dissolved air flotation are; <sup>(1)</sup>

- Air pressure
- Recycle or slip stream flow rate
- Influent total suspended solids (TSS) including oil and grease
- Bubble size
- Dispersion

As in gravity settling, air flotation units are designed for a surface-loading rate that is a function of the waste flow and rise velocity of the contaminants floated by air bubbles. The retention time is a function of the tank depth.

DAF units can be rectangular in design by are usually circular, resembling a primary clarifier or thickener. They are often single stage units.

Induced Air Flotation (IAF) is another method of decreasing particle density by attaching air bubbles to the particles, however the method of generating the air bubble differs. A mechanical action is employed to create the air bubbles and their contact with the waste contaminants. The most common methods use high-speed agitators or recycle a slipstream through venturi nozzles to entrain air into the wastewater.

In contrast to DAF units, IAF units are usually rectangular and incorporate four or more air flotation stages in series. The retention time per stage is significantly less than in DAF circular tanks.

As in gravity settling, the diameter of the particle plays an important role in separation. Polyelectrolytes may be used to increase effective particle diameters. Polymers are also used to destabilize oil / water emulsions, thereby allowing the free oil to be separated from the water. Polymers do this by charge neutralization, which destabilizes an oil globule surface and allows it to contact other oil globules and air bubbles. Emulsion breakers, surfactants, or surface-active agents are also used in air flotation to destabilize emulsions and increase the effectiveness of the air bubbles.



# Partners to the Top

Summit Technology Management is a technical consultancy group, providing specialized services and training to improve process plant operational efficiency, profitability and safety. We provide engineering solutions by offering training, technical services, best practices, and equipment to meet the specific needs of our partner clients.

- ☐ **Basic Design Packages**
- ☐ **Detailed Design Packages**
- ☐ **Commissioning of Process Units**
- ☐ **Process Engineering Studies**
- ☐ **Bench Marking of Process Units**
- ☐ **Regional Training Conferences & In-House Training**
- ☐ **Singapore & Malaysia Company Registration & Set Up**
- ☐ **Specialty Equipment: Distillation Equipment, Filter Skid Packages, Compressor Knockout/Scrubber Skid Packages, Mercury Removal Skid Packages**



[www.summit-tech-mtg.com](http://www.summit-tech-mtg.com)

## Filtration

Filtration is employed in waste treatment whenever suspended solids must be removed. In practice, filtration is most often used to polish wastewater following treatment. In primary waste treatment, filters are often employed to remove oil and suspended solids prior to biological treatment. More commonly, filters are used following biological treatment prior to final discharge or reuse.

Filtration is also widely used as a tertiary treatment for suspended solids removal. The fundamental requirement is that the suspended particles are of sufficient size or capable of being increased in size by flocculation. In cases when it is not possible to flocculate such particles, more advanced techniques such as ultra-filtration is more practical.

Some of the advantages of filtration are as follows: <sup>(3)</sup>

1. Simple to operate and easy to control
2. Can be used for almost any type of free-flowing liquid stream containing suspended solid particles
3. Relatively cost competitive with regard to sludge dewatering processes
4. Lower energy consumption as compared to others
5. Can be integrated easily with other treatment trains
6. Great potential for recovery as the process will not chemically change the characteristics of the materials treated.

Some of the disadvantages, among others are: <sup>(3)</sup>

1. Not capable of producing a high purity effluent as both the liquid product and dewatered sludge still contain a certain fraction of the liquid and solid phase
2. Not capable of separating chemical components especially when they are present in the same phase.
3. Not capable of destroying or chemically changing the toxicity of materials
4. Will produce a liquid waste stream that requires further treatment prior to disposal.

## Ultra-Filtration

Ultra-filtration, by definition, is a membrane filtration process that separates high molecular weight solutes or colloids from a solution or suspension. The process has successfully been applied to both homogeneous solutions and colloidal suspensions that are difficult to separate practically by other techniques.

The types of membrane used for ultra-filtration are similar to reverse osmosis membranes that are made of cellulose acetate and nylon. It has demonstrated unique capabilities in the treatment of industrial wastewaters such as the separation of oil from water, reduction of toxic compounds present in the wastewater and recovery of valuable byproducts. Nevertheless, the process is unattractive to small-scale industries due to high operating and capital costs. <sup>(3)</sup>

## Secondary Treatment - Clarification

The Secondary Treatment consists of at least two types of systems. The first is Fixed Film / Media System and the second is Suspended Growth Systems.

The Fixed Film / Media Biological Oxidation System has a media in which the Biological Film is attached to a Media. The Waste Water is slowly passed through the Media and the Biological Film degrades the organics to non-organic products. The fixed film system include Trickling filters, Rotating Biological Contactor (RBC), etc.

The Suspended Growth Biological Oxidation System includes Stabilization Ponds, Single Pass Aerated Lagoons and Activated Sludge Systems.

## Biological Oxidation

One of the most common ways to convert soluble organic matter to insoluble matter is through biological oxidation. Soluble organics metabolized by bacteria are converted to carbon dioxide and bacterial floc, which can be settled from solution.

The biodegradable contaminants in water are usually measured in terms of biochemical oxygen demand (BOD). BOD is actually a measure of the oxygen consumed by microorganisms as they assimilate organics.

Bacteria metabolize oxygen along with certain nutrients and trace metals to form cellular matter, energy carbon dioxide, water and more bacteria. This process may be represented in the form of a chemical reaction. <sup>(1)</sup>

The purity of the water depends on minimizing the amount of organic compounds that remain after secondary treatment. Factors that affect biological oxidation are shown in Table 2. <sup>(1)</sup>

**Table 2 - Factors Affecting Biological Oxidation**

Food (Organic compounds)	Cellular Matter
+Microorganisms	+Microorganisms
+Oxygen	+Carbon dioxide
+Nutrients	+Water
	+Energy


**Figure 2 - Biological oxidation converts soluble waste to clean water and insoluble biomass**

Factor	Affect
Food, BOD	To maintain control with efficient BOD removal, the proper amount of food must be supplied
Dissolved Oxygen	Insufficient oxygen levels inhibit BOD removal
pH, toxicants	With time, bacteria adapt to change in conditions. Rapid changes in pH or type of waste
Time	The degree of degradations varies with time
Nutrients	Bacteria require trace amounts of nitrogen and phosphorus for cell maintenance.
Temperature	Low Temperature result in slow reaction rates, higher temperature may kill many strains of bacteria

### Fixed Film / Media Systems


Fixed Film / Media Oxidation passed influent wastewater across a substructure laden with fixed biomass. Fixed media allow a biological layer to grow on a substructure continually exposed to raw wastewater. As the layer grows in thickness oxygen transfer to the inter-most layers is impeded. Eventually, some of the layer is removed. This phenomenon is called sloughing. In a continuous

process this material is carried to a sedimentation stage, where it is removed.

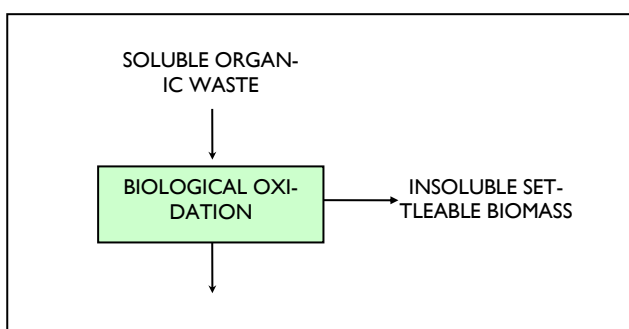

Media plugging and lack of oxygen transfer are the primary difficulties encountered with fixed media designs. Plugging problems can be alleviated by increase wastewater shear. This is normally accomplished by recycling a portion of the wastewater. The graphical representation of bio-film formations in the fixed film/media system is shown in Figure 3.

**Figure 3 - Volumetric element for Microbial film and Bulk Liquid Layers in the fixed film/media system**

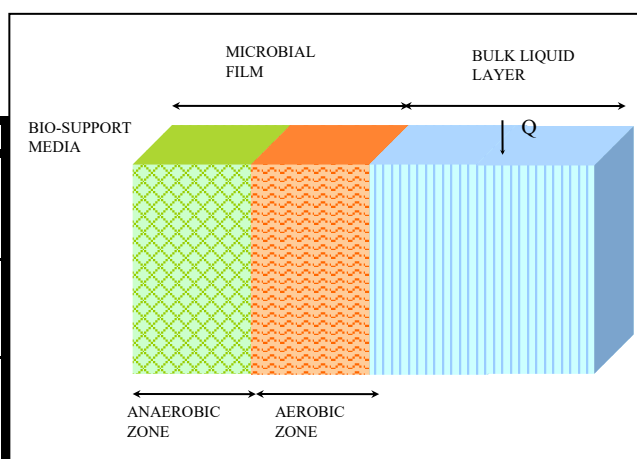

### Suspended Growth Biological Oxidation Systems Activated Sludge Systems

Activated sludge system is a biological process that is characterized by the suspension of aerobic microorganisms being maintained in a relatively homogenous state by the mixing or turbulence induced from the aeration process <sup>(3)</sup>.

The microorganisms oxidize the soluble and colloidal organics in the presence of molecular oxygen. In the oxidation process, a part of the organic material is transformed into new cells that subsequently undergo auto-oxidation in the aeration basin.

In the conventional activated sludge process, the typical hydraulic retention time (HRT) is in the range of 6 to 10 hours, and the volumetric loading rate (VLR) of the reactor is in the range of 0.32 to 0.64 kg BOD /m<sup>3</sup> day.

In the process, the flocs generated from the oxidation process are separated in a clarifier and partly recycled into the aeration basin with some removed for disposal off site or further treatment. The supernatant overflows from the clarifiers as final discharge. The process has been widely used throughout the world as one of the most proven method to treat, not only sewages but also highly toxic industrial wastewaters. Since its invention, the process has been modified to improve its efficiency and reduce the capital and operation costs. <sup>(3)</sup>


The advantages of the activated sludge process are as follows:

- Requires limited space – HRT is 3 to 36 hour range
- MLSS is in the range of 1500 to 10,000 mg/l
- Reliable operator control capability
- Can handle shock loads better with less recovery time required
- Can handle high loaded waste streams
- Excellent solids removal capability

The control of contaminate oxidation at high BOD loading requires a bacteria population that is equal to the level of food. The need is the basis for the activated sludge process. In the activated sludge process, reactants, food, and microorganism are mixed in a controlled environment to optimize BOD removal. The process incorporates the return of concentrated microorganisms to the influent waste.

When bacteria are separated from wastewater leaving an aeration basin and reintroduced to the influent, they continue to thrive. The re-circulated bacteria continue to oxidize wastewater contaminants, and if present in sufficient quantity, produce a relatively low BOD effluent water. Because the activated sludge process incorporates the return of concentrated microorganisms, it must include a process for microorganism concentration and removal. This process includes an aeration stage and a sedimentation stage.


**Figure 4 - Activated sludge process returns active biomass to enhance waste removal**

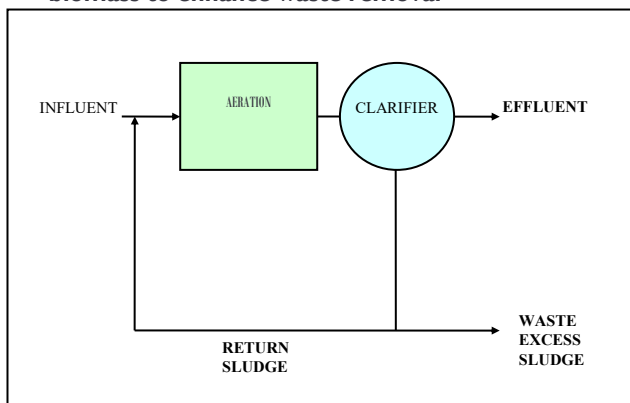

The operating parameters that affect the performance of any activated sludge process are BOD, microorganism, dissolved oxygen, retention time, nutrient concentration, and external influences of temperature and pH. In order to understand the various activated sludge designs, it is necessary to examine the relationship between available food and bacteria population.

Initially, excess food is present; therefore the bacteria reproduce in a geometric fashion. This is termed the “log growth phase”. As the population increase and food decrease a plateau is reached in population. From the inflection point on the curve to the plateau, population is increasing but a decreasing rate. This is called the “declining growth phase”.

**Figure 5 - Model of bacteria population as a function of time and amount of food**

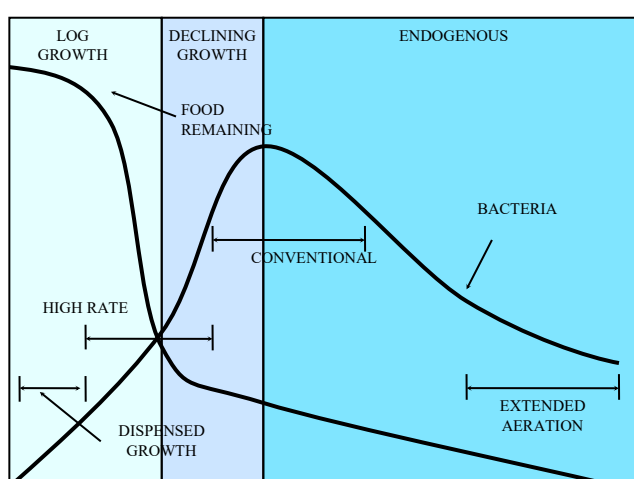

Once the plateau is crossed, the bacteria are actively competing for the remaining food. The bacteria begin to metabolize stored materials, and the population decreases. This area of the curve is termed “endogenous respirations”. Eventually, the bacterial population and the DOD

are at a minimum.

Because activated sludge is a continuous, steady state process, each plant operates at some specific point on the curve, as determined by the oxidation time provided. The point of operation determines the remaining bacteria population and BOD of the effluent.

Optimization of an activated sludge plant requires the integration of mechanical, operational and chemical approaches for the most practical overall program.

Mechanical problems can include excessive hydraulic loading, insufficient aerations, and short-circuiting. Operational problems may include spill and shock loads, pH shocks, failure to maintain correct mixed liquor concentrations, and excessive sludge retention in the clarifier. Because activated sludge depends on microorganism re-circulation, sedimentation is the key stage. The settle ability of the biomass is a crucial factor. As bacteria multiply and generate colonies, they excrete natural biopolymers. These polymers and the slime layer that encapsulates the bacteria influence the flocculation and settling characteristics of the bacteria colonies.

It has been determined empirically that the natural settle ability of bacteria colonies is also a function of their position on the time chart. Newly formed colonies in the log growth phase are relatively non-settle able. At the end of the declining growth phase and the first part of the endogenous phase, natural flocculation is at an optimum. As the endogenous phase continues, colonies break up and floc particles are dispersed, decreasing the biomass settle ability.

Although microbes are eventually able to break down most complex organics and can tolerate very poor environments, they are very intolerant of sudden change in pH, dissolved oxygen and the organic compounds that normally upset an activated sludge system. These upsets normally result in poor BOD removal and excessive carry over of suspended solids (unsettled microorganisms) in the final effluent.

## **Types Of Activated Sludge Systems <sup>(4)</sup>**

### **I. Conventional, plug flow systems**

The most common activated sludge design used by municipalities and industry operates in the endogenous phase, in order to produce an acceptable effluent in BOD and TSS levels.

Conventional aeration represents a “middle of the road” approach because its capital and operating cost are higher than those of the high rate process, but lower than those of the extended aeration plants. Natural flocculation is at the optimum, so the required sedimentation time for the removal of suspended solids from the effluent is minimized. <sup>(1)</sup>

Settled wastewater and return activated sludge (RAS) enter the front end of the aeration tank and are mixed by diffused air or mechanical aeration. In early designs, air application was generally uniform throughout the tank length; however, low DO concentrations usually occurred in the initial passes of the tank. In modern designs, the aeration system is designed to match the oxygen demand along the length of tank by tapering the aeration rates. During the aeration period, adsorption, flocculation, and oxidation of organic matter occur. Activated sludge solids are separated in a secondary settling tank. <sup>(4)</sup>

### **2. Extended Aeration, plug flow systems**

Extended aeration plants operate in the endogenous phase, but use longer periods of oxidation to reduce effluent BOD levels. This necessitates higher capital and operating cost (i.e., larger basins and more air). In conjunction with lower BOD, extended aeration produces a relatively high-suspended solids effluent when optimum natural settling ranges are exceeded.

Extended aeration design may be necessary to meet effluent BOD requirements when the influent is relatively concentrated in BOD or the waste is difficult to biodegrade. Because extended aeration operates on the declining side of the biomass population curve, net production of excess solids is minimized.

Therefore, savings in sludge handling and disposal cost may offset the higher plant capital and operating cost required for extended aeration. <sup>(1)</sup>

The extended aeration process is similar to the conventional plug-flow process except that it operates in the endogenous respiration phase of the growth curve, which requires a low organic loading and long aeration time. Because of the long HRT (in the order of 24 to 36 hours), aeration equipment design is controlled by mixing needs and not oxygen demand. The process is used extensively for pre-engineered plants for small communities. Generally, primary clarification is not used. Secondary clarifiers are designed at lower hydraulic loading rates than conventional activated sludge clarifiers to better handle large flow rate variations of small communities. Although the bio-solids are well stabilized, additional bio-solids stabilization is required to permit beneficial reuse. <sup>(4)</sup>

### 3. Complete Mix Systems

The complete mix activated sludge (CMAS) is an application of the flow regime of a continuous flow stirred-tank reactor. Settled wastewater and RAS are introduced typically at several points in the aeration tank. The organic load, MLSS concentration and oxygen demand are uniform throughout the tank. An advantage of the CMAS is the dilution of shock loads that occurs in the treatment of industrial wastewaters. The CMAS is relatively simple to operate but tends to have low organic substrate concentrations that encourage the growth of filamentous bacteria, causing sludge bulking problems.

### 4. Contact Stabilization

Due to the highly efficient absorptive capabilities of activated biomass, the time necessary for biomass to capture the colloidal and soluble BOD is approximately 30 minutes to one hour. Oxidation of fresh food requires the normal aeration time of 4-8 hours. In the contact stabilization design, relatively quick sorption time reduces aeration tank volume requirements. The influent waste is mixed with return biomass in the initial aeration tank (or contact tank) for 30-90 minutes. The entire flow goes to sedimentation, where the biomass and its captured organics are separated and returned to a re-aeration tank. In the re-aeration tank the wastes undergo metabolism at a high biomass population. The system is designed to reduce tank volume by containing the large majority of flow for a short period of time.

This process is not generally as efficient in BOD removal as the conventional plant process, due to mixing limitation in the contact basin. Operating costs are equivalent. Due to the un-stabilized state of the biomass at sedimentation, flocculation is inferior. Suspended solids in the effluent are problematic.

Because this design exposed only a portion of the active biomass to the raw effluent at a time, it is less susceptible to feed variations and toxicants. For this reason it can be beneficial for treatment of industrial wastes. <sup>(1)</sup>



Looking for cleaning supplies, industry cleaning chemicals, odour control products, paint thinner solvents, white spirit, industrial laundry chemicals, chaffing fuel, and laundry detergent supplies in Kuwait? Al Sanea Chemical Products has the best chemical products' supply for all your needs.

Al Sanea Chemical Products  
Sabhan Industrial Area,  
Street No. 84, Block No.8, Plot No. 185, Kuwait  
(P.O. Box 5629, Safat 13057, Kuwait)  
Tel: 00965 – 24747623 / 24734991 / 24734952/  
24736740  
Fax: 00965 - 24760678  
Email: [info@alsanea.com](mailto:info@alsanea.com)  
Web: [www.alsanea.com](http://www.alsanea.com)

Table 3 - Activated Sludge Systems <sup>(1)</sup>

Process	Aeration Retention Time, hrs	MLSS, ppm	DO ppm	Sludge Recycle %	BOD Load- ing Lb/ mft <sup>3</sup>	F/M Lb BOD / lb MLVSS	Sludge Produc- tion	BOD Re- moval %
High Rate	0.5-3	300 - 1000	0.5-2	5- 15	2.5	1.5 – 5.0	0.65 – 0.85	75-85
Conventional	6 – 8 (diffused)  9-12 (mechanic al)	1000 – 3000	0.5- 2.0	20-30	20-40	0.2-0.5	0.35-0.55	85-90
Extended Aer- ation	18-35	3000 - 6000	0.5- 2.0	75-100	10-25	0.03- 0.15	0.15-0.20	90-95
Step Aeration	3-5	2000 - 3500	0.5- 2.0	25-75	40-60	0.2-0.5	0.35-0.55	85-95
Contact Stabili- zation	3-6	1000 -3000 (aeration)  4000–10000 (contact basin)	0.5- 2.0	25-100	60-70	0.2-0.6	0.35-0.55	85-95
Pure Oxygen Complete Mix	1-3	3000-8000	2-6	25-50	100-250	0.25-1.0	0.35-0.55	95-98
	3-5	3000-6000	0.5- 2.0	25-100	50-120	0.2-0.6	0.35-0.55	85-95

The contact zone detention time is relatively short (30 to 60 minutes), and the MLSS concentration is lower than in the stabilization zone. Rapid removal of soluble BOD occurs in the contact zone, and colloidal and particulate organics are captured in the activated sludge floc for degradation later in the stabilization zone.

In the stabilization zone, RAS is aerated and the detention time is in the order of 1 to 2 hours to maintain a sufficient SRT (solids retention time) for sludge stabilization. Because the MLSS concentration is so much higher in the stabilization zone, the contact stabilization process requires so much less aeration volume than CMAS or conventional plug flow process for the same SRT. The process was developed for BOD removal and the short contact time limits the

amount of soluble BOD degraded and NH<sub>4</sub>-N oxidation. <sup>(4)</sup>

## 5. Step Feed

In a plug flow basin, the head of the basin receives the waste in its most concentrated form. Therefore, metabolism and oxygen demand are greatest at that point. As the waste proceeds through the basin, the rate of oxygen uptake (respiration rate) decreases, reflecting the advanced stage of oxidation.

Tapered aeration and step aeration reduce this inherent disadvantage. Tapered aeration provides more oxygen at the head of the basin and slowly reduces oxygen supply to match demand as waste flows through the basin. This results in better control of the oxidation process and reduced air cost.

Step aeration modifies the introduction of influent waste. The basin is divided into several stages, and raw influent is introduced to each stage proportionally. All return microorganisms (sludge) are introduced at the head of the basin. This design reduces aeration time to 3-5 hours, while BOD removal efficiency is maintained. The shorter aeration time reduces capital expenses because a small basin can be used. Operating costs are similar to those of a conventional plant. <sup>(1)</sup>

Flexibility of the operation is one of the important features of this process because the apportionment of the wastewater feed can be changed to suit operating conditions. The concentration of MLSS may be as high as 5000 to 9000 mg/l in the first pass, with lower concentrations in subsequent passes as more influent feed is added. This process has the capability of carrying a higher solids inventory and thus a higher SRT for the same volume as a conventional plug flow process. <sup>(4)</sup>

## 6. Oxidation Ditch

Oxidation ditch consists of a ring or oval-shaped channel equipped with mechanical aeration and mixing devices. Screened wastewater enters the channel and is combined with the RAS. The tank configuration and aeration and mixing devices promote unidirectional channel flow, so that the energy used for aeration is sufficient to provide mixing in a system with a relatively long HRT. The aeration/mixing method used creates a velocity from 0.25 – 0.30 m/s in the channel, which is sufficient to keep the activated sludge in suspension. At these channel velocities, the mixed liquor completes a tank circulation in 5 – 15 minutes, and the magnitude of the channel flow is such that it can dilute the influent wastewater by a factor of 20-30. As a result, the process kinetics approach that of a CMAS, but with plug flow along the channel.

## 7. High -Purity Oxygen

A staged enclosed reactor is used in the high-purity oxygen. Three or four stages are generally used and the influent wastewater, RAS and high-purity oxygen are added to the first stage. The oxygen partial pres-

sure in the headspace may range from 40 to 60 percent in the first stage to 20 percent in the last stage. At high oxygen partial pressure, higher volumetric oxygen transfer rates are possible so that pure oxygen systems can have a higher MLSS concentration and operate at a shorter HRT and higher VLR than conventional processes. The rate of oxygen addition is 2 to 3 times greater than CAS. Major advantages for pure oxygen systems are the reduced quantities of off-gas if odor control and VOC control are required.

## 8. Sequential Batch Reactors (SBR)

The SBR is a fill-and-draw type of reactor system involving a single complete-mix reactor in which all steps of the activated sludge process occur. An SBR goes through a number of cycles per day; a typical cycle may consist: fill, aeration, settle and withdrawal of supernatant.

An idle step may also be included to provide flexibility at high flows. Mixed liquor remains in the reactor during all cycles, thereby eliminating the need for separate secondary clarifiers. The HRT ranges from 18 to 30 hours, based on influent flow rate and tank volume used.

## Latest Research in Wastewater Treatment Systems

Recently, biological process has been attracting considerable attention for removing heavy metals from aqueous wastes. Biofilm systems, in particular, are able to retain relatively high biomass concentrations resulting in shorter liquid detention times, better performance stability and higher volumetric removal rates. The efficiency of an expanded bed biofilm reactor in the treatment of waste waters contaminated with heavy metals has been investigated for rubber product manufacturing industry. In the study, it has been found that the process could achieve 60% to 90% removal of Zinc.

Application of plant-based flocculants can be considered as new in industrial wastewater treatments. Despite its biodegradable characteristics, plant-based flocculants possess an advantage for oxidation and coagulation process. A newly invented plant-based flocculants, namely KN2 has been introduced in the treatment of inking wastewater.

Comparison has also been made with other conventional chemical-based flocculants (i.e. PAC, PE, PDMC, etc.) in order to compare their effectiveness in removing pollutants. Application of activated carbon as a polishing media at the final stage shows a drastic declination in COD and BOD values as well as the other parameters.

Dissolved Air Flotation (DAF) using micro-bubbles of size  $50\mu\text{m}$  are used to remove suspended solids, emulsified oils & greases from industrial and municipal waste waters. Micro-sized air bubbles are formed by injection of pressurised recycle water into a flotation tank using special designed nozzles or needle valves. These bubbles will attach to the suspended solids and float them to the surface. The floated sludge can be removed either by overflow or mechanical scraping. Influencing parameters being studied are bubble size, particle size, air pressure for saturated vessel, air saturation system, and efficiency of suspended solids removal. The saturation system consists of an unpacked saturation vessel, an air compressor and the associated control system. The saturation vessel operated at a 4 bars pressure. The results of the study have reported that percentage removal of Suspended Solids, COD, Colour and Turbidity were 90%, 91%, 86% and 90%, respectively. Simulation has been carried out to obtain kinetic data for the parameters under study.

### Conclusions

The Waste Water Treatment System has a variety of unit operations. They include gravity separators, mechanical

separators, filters, stripper towers, aeration and clarifier basins, as well as others. The transformation of the by-product streams is based of the effectiveness of each of these unit operations.

Each of these unit operations has three values.

1. Industry Standard Design Value
2. Actual Design Value and
3. Present Operating Value

The difference between the values can be benchmarked to establish areas good operation and areas of opportunities for improvements. A review of the individual unit operations should be conducted to maximize the effectiveness of a Waste Water Treatment System.

### References

1. Betz Handbook of Industrial Water Conditioning, Ninth Edition, 1991
2. Ondo Nalco Water Treatment Technology Customer Seminar, Traders Hotel Singapore, May 2001
3. Ayub Md. Som, Department of Chemical & Process Engineering, Universiti Kebangsaan Malaysia, 43600 UKM Bangi, Selangor Darul Ehsan, Malaysia
4. Wastewater Engineering, 4<sup>th</sup>. Edition, Metcalf & Eddy, 2003.



Typical Removal Efficiencies for Oil Refinery Treatment Process (I)

Process	Process Influent	BOD	COD	TOC	SS	Oil	Phenol	NH3	Sulfide
API Separator	Raw Water	5-40	5-30		10-50	60-99	0-50		
Primary Clarifier	API Effluent	30-60	20-50		50-80	60-95	0-50		
DAF	Separator Effluent	20-70	10-60		50-85	70-85	10-75		
Filter	API Effluent	40-70	20-55		75-95	65-90	5-20		
Secondary Oxidation Pond	API Effluent	40-95	30-65	60	20-70	50-90	60-99	0-15	70-99
Aerated Lagoon	Primary Effluent	75-95	60-85		40-65	70-90	90-99	10-45	95-99
Activated Sludge	Primary Effluent	75-95	60-85		40-65	70-99	90-99	10-45	95-99
Trickling Filter	API Effluent	60-85	30-70		60-85	50-80	70-98	15-90	70-99
Cooling Tower	Primary Effluent	50-95	40-90	10-70	50-85	60-75	75-99	60-95	
Activated Carbon	Primary Effluent	70-95	70-90	50-80	60-90	75-95	90-99	7-33	
Tertiary Filter granular media	Secondary Effluent			50-65	75-95	65-95	5-20		
Activated Carbon	Secondary + Filter Effluent	91-98	86-94	50-80	60-90	70-95	90-99	33-87	



**PT Dinamika Teknik Persada**  
provide Engineering Design  
to the upstream and downstream  
sectors of oil & gas  
industry:

- Processing plants
- Pressure vessels
- Heat exchangers
- Piping systems
- Onshore pipelines
- Offshore pipelines
- Offshore platforms
- Drilling rigs

## PT. Dinamika Teknik Persada

is an Engineering Consultants focused on providing engineering and technical services to the oil and gas industry. We develop innovative and cost effective solutions and helping our clients to achieve high performance from their assets by providing expertise, novel methods and appropriate tools

- FEED to Detailed engineering Design
- Independent Design Verification
- Risk Assessments
- Asset Integrity Management
- Risk Based Inspection
- Reliability Centered Maintenance
- Fitness for service Assessment
- Remaining Life Assessment
- Finite Element Analysis



Address : Ruko Golden Boulevard Blok K No. 1-2  
Jl. Pahlawan Seribu, BSD City, Serpong  
Tangerang 15322 – Indonesia  
Phone / Fax : +62 21 53150601  
Email : [info@ntp-eng.com](mailto:info@ntp-eng.com)  
Website: [www.ntp-eng.com](http://www.ntp-eng.com)

# FLINT WATER CRISIS

By:

Keisha Antoine PhD, PE

Antoine Technical Consulting LLC

Contaminants that can get into drinking water are very dependent on the geographic location of its source because the surrounding ecosystem and runoff from the watershed can be heavily influenced by human activity from agriculture, industrial and domestic use. This dependency of the water quality in geographic location leads us to understand that it is not possible to regard all water as being the same. Thus, although the general process steps in the treatment of water are the same, specifics can vary tremendously. Water treatment can be as much art as it is science.

For largely economic reasons, Flint, MI decided to process drinking water for its citizens itself, rather than continuing to obtain water from Detroit Water and Sewerage Department, which sources its water from Lake Huron. In making this switch, the city decided to temporarily source its water from the Flint river until it can be supplied with Lake Huron sourced water by the Karegnondi Water Authority at the end of 2016. This switch occurred in May 2014. Almost immediately, the populace reported foul-smelling and foul-tasting water. Visually, the water also showed high turbidity and coloration at the end user. The City of Flint later reported that the water had lead and iron contamination and contained levels of total trihalomethanes (TTHMs), that exceeded maximum contaminant levels (MCLs). TTHMs are byproducts of disinfection and are produced in amounts that can exceed the MCLs if chlorination rather than chloramination is used as the disinfection technology.

**Lead and discoloration.** It has been said that the lead in the water was attributed to the high corrosiveness of the Flint river water. What exactly is causing the water to be more “corrosive”? It is the high level of chloride ions. Chloride ions have an affinity to iron in the cast iron pipes, and which leads to stress corrosion cracking. These cracks are entryways for lead and iron in the distribution system to mix with water. Another possible source of lead can arise from the use of chloramines to treat drinking water, that is, if chloramination was used for disinfection. The lead leaching caused by chloramines is especially pronounced in older homes with older plumbing systems.

The Water Quality Summary Report, dated January 2015 and published by Flint, shows that Flint had no value as-



signed for a maximum concentration level (MCL) for chloride, although the average level was 86 ppm with a range of 78 – 92 ppm. What is now known is that the corrosion inhibitors were not used as part of the water treatment plan. The use of corrosion inhibitors (phosphates) would have mitigated either mechanism of lead leaching. Water treated by the Detroit Water & Sewerage Authority, the previous supplier of drinking water, is treated with anti-corrosion agents.

**A look at TTHMs.** Flint received violations from the Michigan Department of Environmental Quality (MDEQ) for total coliform and E. coli in August and September of 2014. To combat the bacteria, Flint used chlorination (where free chlorine is used) rather than chloramination (where compounds of chlorine and ammonia are used) to

disinfect the water and bring the MCLs within specification. Free chlorine is faster acting than chloramines. The result of chlorination, however, was an uptick in the TTHMs levels.

**Proposed methods for managing water “corrosivity”.** In lieu of using corrosion inhibitors are there other ways in which chloride ions could be removed? A possible means of removing the chloride ions is to oxidize them to the chlorine gas using ozonation. Ozonation is a well-accepted practice for disinfection at public water utilities, and optimizing the dosage according to source water properties could be a management practice. An effective management practice would also include a consideration of where ozone is used in the process as well as frequency of use. Another method of removing chloride ions could be to precipitate it out. The treatment of water with silver ions or colloidal silver nanoparticles on a ceramic filter substrate can remove these chloride ions. Additionally, the use of silver for disinfection of drinking water can also be leveraged. These alternatives cost money and must go through extensive evaluation as it is seen that

each component added to the water to make it drinkable brings its own set of potential issues.

#### Biography

*Keisha Antoine obtained a B.S. in Chemical Engineering in 2001 and a M. Eng. and PhD in Materials Science & Engineering in 2004 and 2007, respectively, all from Lehigh University. She is the holder of one patent and is a registered professional engineer in the state of NY. Keisha has nearly 8 years of industrial experience working on glass processes and functionalization, carbon footprint and energy analyses at Corning Incorporated, a Fortune 500 technology company. In 2015, Keisha went into private practice and opened her own technical services consulting firm, Antoine Technical Consulting LLC, providing process design, scale-up and water management solutions to manufacturers principally in the chemical process industries. She is a current member of the American Institute of Chemical Engineers (AIChE).*

## Advertisers

IACPE.....	Page 3
KLM Technology Group.....	Page 7
Summit Technology Management.....	Page 10
Al Sanea Chemical Products.....	Page 15
PT. Dinamika Teknik Persada.....	Page 19



**IACPE**  
INTERNATIONAL ASSOCIATION OF  
CERTIFIED PRACTICING ENGINEERS

[www.iacpe.com](http://www.iacpe.com)

